

PORODO
LIFESTYLE



Porodo Lifestyle

**VERTICAL DESIGN
TEMP GLASS MINI OVEN**

SKU: PDMOKB15FWH

Table of Contents

Product Overview	2
Specifications	2
Schematic View	3
Before Use	3
First Use	3
Operation Instructions	4
Maintenance and Cleaning	5
Safety Precautions	5
Disposal	6
Warranty	7
Contact Us	7

Product Overview

The Porodo Vertical Design Temp Glass Mini Oven offers versatile cooking functions that allow you to bake, grill, and toast with ease. With a 15L capacity and 750W power, this compact yet efficient oven ensures 360° even heating, thanks to its dual stainless steel heating tubes that distribute heat uniformly from above and below. It also features a built-in 60-minute timer with an auto shut-off function, automatically turning off the oven and signaling completion with a bell alert. Perfect for all your cooking needs, it combines convenience and performance in a stylish, space-saving design.

Specifications

Rated Voltage	AC 220V
Rated Frequency	50Hz
Oven Capacity	15L
Rated Power	750W
Temperature Range	70°C-250°C
Timer Setting	0-60 Minutes
Power Cord Length	80cm
Plug Type	UK 3-Pin Plug
Tray Dimensions	200x220mm
Product Dimensions	235 x 240 x 315mm
Net Weight	2.94kg
Model Number	PDMOKB15F


Schematic View

1. Temperature Selection Knob

Used to choose different temperatures based on the food you want to cook.

2. Timing Knob

used to choose the baking time from 0 to 60 minutes.

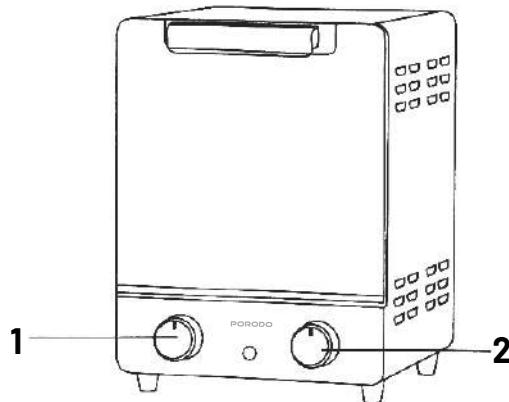

Before Use

REMINDER: The electric heating element is coated with protective silicone oil during manufacturing. When the oven is used for the first time, it may emit smoke due to the oil burning off. This is a normal occurrence and will stop within 4-5 minutes. It will not affect the oven's performance.

1. Remove the protective film from the electric oven and ensure all packaging materials inside the oven are removed.
2. Check that the function knob and timer knob of the electric oven are set to the "off" position.
3. Ensure your power supply matches the rated voltage indicated on the oven.
4. Wipe the inner and outer surfaces of the oven, including components, dry before plugging in the power supply.
5. Set the thermostat to maximum and preheat the oven for 5-10 minutes before use.

First Use

1. Unpack and check the included attachments and materials. Carefully read the user manual.

2. For indoor use only, place the oven on a stable surface (e.g., kitchen workbench or table). Ensure the oven is at least 10 cm away from any wooden products or walls.
3. Set the timing knob to the "0" position before using the oven for the first time.
4. Clean all accessories with warm water and a mild cleaning agent. Avoid using harsh materials like steel wire balls to prevent damage.
5. Use a damp towel to clean the inner chamber, baking tray, and accessories. Reassemble the oven and its parts after cleaning.
6. Check the power supply and socket to ensure compliance with the user manual. Then, connect the power supply.
7. Rotate the "Temperature Selection" knob to 200°C, then set the "Timing knob" for 20 minutes to sterilize and eliminate odors.
8. Avoid placing any objects on top of the oven to prevent scratches or discoloration.

Operation Instructions

1. Select Temperature: Choose the appropriate temperature based on the food type (range: 0-250°C). Suitable for corn cobs, potato chips, hot dogs, bread, chicken, fish, and other foods.
2. Adjust Temperature: Set the "Temperature Selection" knob to the desired level for the selected food.
3. Preheat Oven: Preheat the electric oven for 5-10 minutes.
4. Prepare for Baking:
 - a. Place the baking net on the shelf.
 - b. Arrange food on the food plate, then place it on the baking net for grilling. For bread, place it directly on the baking net.
5. Set Timer: Rotate the timer knob clockwise to set the baking time, adjusting based on food size, thickness, and desired bake color.
6. Start Barbecue: Once set, enter the barbecue stage.
7. Flip Food: For even grilling, flip the food once during the barbecue process.

Maintenance and Cleaning

1. Unplug the oven: Before cleaning, ensure the oven is completely cooled and unplugged.
2. Surface Cleaning: Wipe both the inner and outer surfaces of the oven with a soft cloth or sponge dipped in a neutral cleaning agent.
3. Baking Tray & Accessories: Clean the baking tray, baking net, and food fork with warm water and wipe them with a cloth.
4. Avoid Harsh Cleaning Tools: Do not use wire brushes, hard brushes, or corrosive liquids to clean the oven, as these may damage the surfaces and protective coatings.
5. No Toxic Agents: Refrain from using toxic or corrosive agents like gasoline or polishing liquids for cleaning.
6. Do Not Immerse in Water: Never rinse the oven with water or immerse it in water.

Safety Precautions

1. Keep Away from Water: Ensure the oven is kept dry at all times. Do not allow water to come in contact with the electrical components.
2. Do Not Block Air Vents: Ensure that the air vents are not obstructed during operation to prevent overheating.
3. Handle with Care: Always use oven mitts or gloves when handling the oven, as the exterior may become hot during use.
4. Supervision: Never leave the oven unattended while in use, especially when cooking food that could potentially cause a fire.
5. Unplug After Use: Always unplug the oven after use to ensure safety and avoid unnecessary power consumption.
6. Keep Away from Flammable Materials: Do not place the oven near flammable materials or heat-sensitive objects to prevent fire hazards.

- 7. Use on Stable Surface:** Place the oven on a flat, stable, heat-resistant surface to ensure it doesn't tip over.
- 8. Do Not Touch Heating Elements:** Avoid direct contact with the heating tubes when the oven is in operation or right after use, as they can remain hot for a while.
- 9. Allow Cooling Time:** Before cleaning or storing, allow the oven to cool down completely to avoid burns.
- 10. When removing food from the oven, use insulated gloves and gently remove the food to avoid burns.**

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at <https://www.porodo.net/warranty> and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

<https://www.porodo.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: <https://www.porodo.net/>

Service Support: support@porodo.net

Instagram: [porodo](#)