

PORODO
LIFESTYLE



Porodo Lifestyle
CERAMIC BLADE
Gentle Grooming Trimmer

SKU: PDLFST8126BK

Table of Contents

Product Overview	2
Specifications	2
Key Features	3
Blade Usage Guide	4
Cleaning and Maintenance	5
Charging Instructions	6
Safety Precautions	7
Disposal	8
Warranty	8
Contact Us	8

Product Overview

The Porodo LifeStyle CERAMIC BLADE Gentle Grooming Trimmer with a Digital Display offers a high-performance grooming experience, designed for precision and comfort. Featuring a ceramic blade, it ensures a gentle shave, making it ideal for sensitive skin. Whether you're using it for wet or dry shaving, this trimmer is highly versatile. It boasts IPX7 water resistance, allowing for easy cleaning, and includes a detachable comb for quick adjustments. With 10 days of battery life on a full charge, it provides reliable, long-lasting performance. The secure travel lock ensures it won't turn on accidentally, and the fast USB-C charging feature guarantees you're always ready to go. With its sleek design and intuitive digital display, the Porodo LifeStyle CERAMIC BLADE Trimmer is the ultimate grooming tool for a smooth, efficient, and hassle-free experience.

Specifications

Input	DC 5V/1A
Rated Power	5W
Battery Capacity	600mAh
Working Time	90 Minutes
Recharge Time	100 Minutes
Charging Interface	Type-C

Water Resistance Level	IPX7
Product Weight	123g
Product Size	34×39×145.5mm
Model Number	PDLFST8126

Key Features

- 1. Precision Engineered Blades:** Specially designed blades that effortlessly cut through coarse or thick hair without causing pulling, tugging, or irritation. The blades also feature an ultra-compact trimming design, ensuring a smooth and safe trimming experience, especially for sensitive areas.
- 2. Ultra-Powerful Motor:** Equipped with a high-performance motor that delivers powerful cutting performance while maintaining an ultra-quiet operation. This reduces vibration, making your trimming experience more comfortable and less disruptive.
- 3. Fully Waterproof Construction:** The device is designed with a fully waterproof body, allowing you to clean it effortlessly. It holds an IPX7 waterproof rating, which ensures it can be submerged in water without damage, making it ideal for both wet and dry use.
- 4. Detachable Blade:** The blade is easily detachable for quick and convenient cleaning, ensuring optimal performance and hygiene after each use.
- 5. Adjustable Guide Comb:** An adjustable guide comb allows you to customize the trim length to suit your preferred style, providing flexibility for a variety of hair lengths and styles.
- 6. On/Off Button:** A simple and user-friendly on/off button for quick operation.

Blade Usage Guide

1. Blade Features

Ceramic blade, known for its high durability and sharpness. It resists wear over time, maintaining efficiency and precision during use.

2. Disassembling the Blade:

2.1 Before starting the disassembly process, ensure the trimmer is turned off to avoid any accidents.


2.2 Gently press the blade with your thumb and push it forward, following the direction indicated by the arrow.

2.3 Be sure to hold the blade carefully during disassembly to prevent it from falling or being damaged.


3. Assembling the Blade

3.1 Align the blade (part A) with the slots (B) on the trimmer body. Carefully insert the blade into the slots, ensuring it fits securely.


3.2 Gently press the blade back into place. You will hear a distinct click when the blade is fully secured, confirming that it is locked into position.

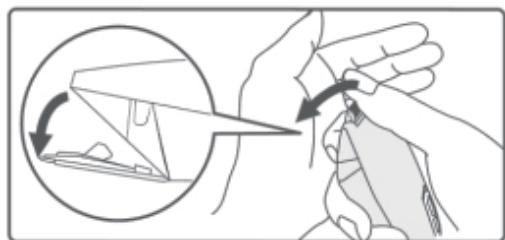

2

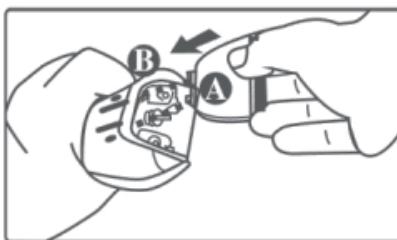

3.1

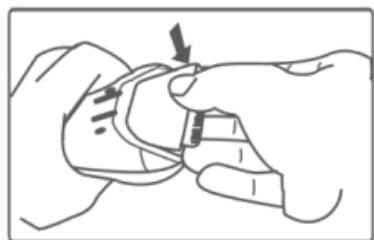

3.2

Note: The ceramic blade is delicate; handle it with care to prevent any damage. To maintain optimal hygiene, it is essential to sterilize the blade regularly.

Cleaning and Maintenance

1. Blade Cleaning:

1.1 Use the cleaning brush to clean the cutter teeth, ensuring no debris or hair is left behind.

1.2 Hold the blade handle as shown in the image, and use the brush to clean between the bottom blade and the upper blade.

Notes:

a. Never remove the spring of the blade, as doing so may prevent the blade from returning to its original position. This could lead to the blade needing to be discarded.

b. After each use, always remove the blade and clean both the surface and the teeth of the blade to maintain optimal performance.

c. Wipe the blade dry after cleaning to prevent rust from forming on the spring.


d. The blade may slightly heat up during operation, which is completely normal and will not affect its functionality.

2. Body Cleaning:


2.1 Use a cleaning brush to remove any trimmed hair from the blade slot. Gently sweep away the hair to ensure the trimmer is clean and ready for use.

2.2 Rinse the trimmer with water to remove any remaining hair or debris. Ensure that no water enters the electrical components. The trimmer is waterproof, and it can be safely washed under a gentle stream of water.


2.3 After washing, dry the trimmer thoroughly using a clean, soft cloth. Be sure to remove any excess moisture. Once dry, reattach the blade and store the trimmer in a dry, safe place.

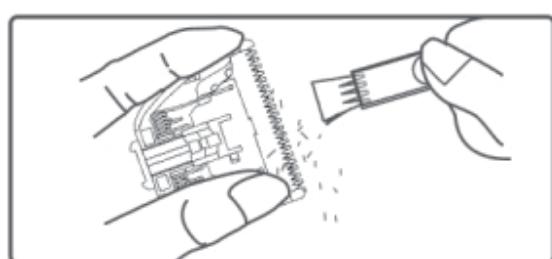

1.1

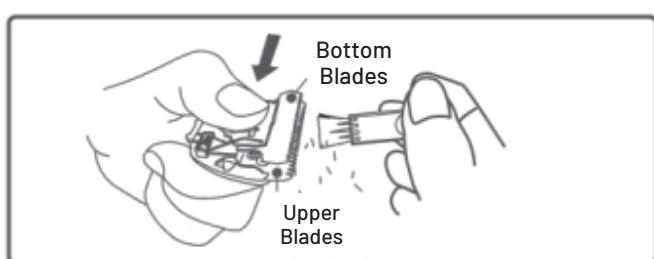


1.2

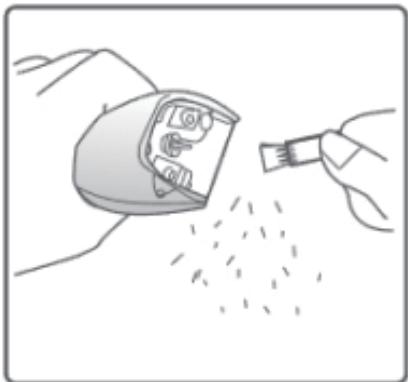

2.1




2.2

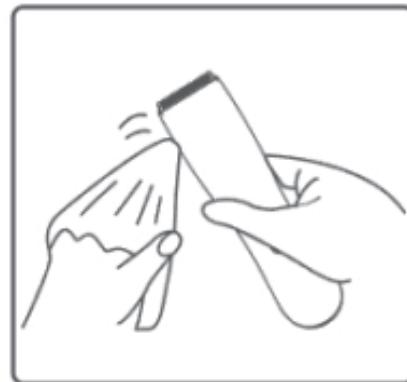


2.3

Charging Instructions

1. Ensure the trimmer is turned off before connecting the USB cable for charging.
2. The USB cable can be plugged into chargers with a USB interface, such as a mobile phone charger, computer, laptop, or power bank.
3. Charge your trimmer fully before its first use.
4. Ensure the adaptors are labeled with an output of DC5V 1A or higher to safely charge the trimmer.

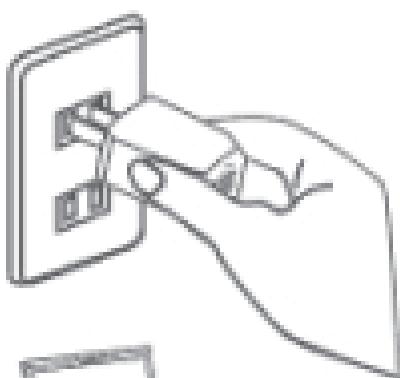

Laptop

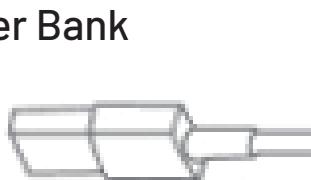

Power Bank



Safety Precautions

1. Always read the user manual before using the trimmer to understand its features, usage, and safety instructions.
2. Avoid using the trimmer on irritated or broken skin to prevent further injury.
3. Ensure the trimmer is dry when not in use to prevent water damage, even though it's water-resistant.
4. Always store the trimmer in a dry, cool place, away from heat and moisture to maintain its performance and longevity.
5. This product should not be used by children. Always keep it away from their reach.
6. When charging, always use the provided USB-C cable. Do not charge the trimmer in damp conditions.
7. Clean the trimmer and its detachable comb after each use to maintain hygiene and proper function. Disconnect it from any power source before cleaning.
8. For safety reasons, do not attempt to disassemble the trimmer or its components.
9. This product is designed for gentle grooming. Do not use it for other purposes to avoid accidents or injury.
10. Always ensure the trimmer has an adequate battery charge before use to avoid interruptions.
11. If the trimmer becomes too hot, stop using it and allow it to cool down before further use.
12. Do not attempt to repair or puncture the trimmer. If damaged, contact the manufacturer or an authorized service provider for assistance.



This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty



If you have any questions about this Privacy Policy, please contact us at:
info@porodo.net
Website: **porodo.net**
Service Support: **support@porodo.net**
Instagram: **porodo**