



Porodo Soundtec

CRYSTAL-GLOW

MINI BLUETOOTH SPEAKER

SKU: PDSTC7WH

Table of Contents

Product Overview	2
Specifications	2
Safety Precautions	3
Package Contents	3
Product Design and Button Functions	4
Operation Instructions	4
Setting Up True Wireless Stereo	5
Charging Instructions	6
Troubleshooting	6
Disposal	7
Warranty	8
Contact Us	8

Product Overview

The Porodo Soundtec Crystal-Glow Mini Bluetooth Speaker combines stylish design with high functionality. Featuring RGB mood lights, it creates a vibrant atmosphere while delivering superior sound quality through true wireless stereo technology. With Bluetooth connectivity, USB-C charging, and TF card playback support, it provides a seamless listening experience. Enjoy up to five hours of playtime, making it perfect for on-the-go entertainment. Whether you're hosting a party or relaxing, the Porodo Soundtec Crystal-Glow Mini Bluetooth Speaker enhances any environment with both its audio and visual appeal.

Specifications

Rated Power	5W
Battery Capacity	1000mAh
Bluetooth Version	5.4
Playtime	Around 5h
Recharge Time	Around 3h
Transmission Distance	10m
Connectivity Modes	BT / TF (Micro SD)
Charging Interface	USB-C
Shell Material	ABS + Acrylic
Product Size	66 x 66x 90mm
Cable Included	50cm USB-C Charging Cable
Model Number	PDSTC7


Safety Precautions

1. Ensure the speaker is placed on a stable surface to avoid damage from accidental drops.
2. Keep the speaker away from liquids and fire to prevent damage.
3. Do not leave the speaker in high temperatures or a highly moist environment for extended periods.
4. Avoid insulating the speaker to prevent overheating.
5. The charging voltage must be 5V. Using a higher voltage charger may damage the internal chip, preventing the speaker from working properly.
6. The speaker is made of crystal acrylic, which is fragile. Handle with care.
7. Tear off the film from the foot pad before use to prevent the speaker from jumping while playing.


Package Contents

C7 Bluetooth Speaker 1pcs

Charging Cable 1pcs

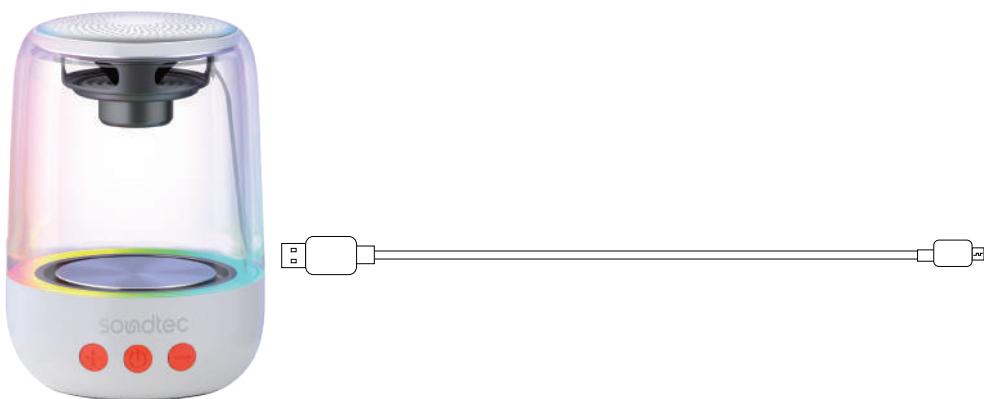

Product Design and Button Functions

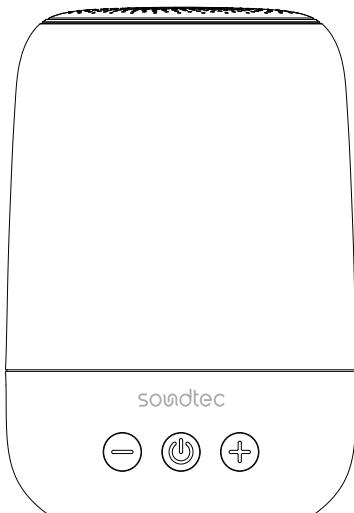

— Short press: previous song

Long press: volume down

Double-click: lighting shift

(6 optional lighting modes)



Short press: pause/play

Long press: on/off

Double-click: turn on TWS pair connection, turn off

TWS pair connection




Short press: next song

Long press: volume up

Double-click: turn off the

lighting

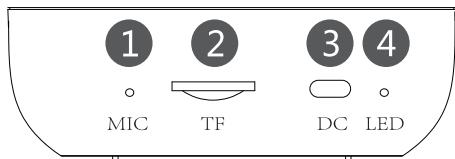

1. Microphone

2. TF Slot

3. DC Slot

4. LED Indicator

Operation Instructions

1. Turning On/Off the Speaker

a. Press and hold the power button for 3 seconds to turn on the speaker.

b. To turn off, press and hold the power button again.

2. Connecting to a Mobile Device via Bluetooth

a. Power on the speaker. The indicator light will flash blue slowly.

b. Enable Bluetooth on your mobile phone and search for "PDSTC7." Select it to pair with the speaker.

(Note: If the speaker is already paired with a previous device, turn off the Bluetooth on that device before connecting to a new one.)

3. Using a Micro SD/TF Card

a. Insert the Micro SD/TF card into the TF slot on the speaker.


b. Once inserted, you will hear a prompt, and the audio files on the card will begin to play automatically.

Supported formats: MP3, WMA

Maximum card capacity: 32GB

Setting Up True Wireless Stereo

1. Turn on both C7 speakers and double-click the power button on either speaker.
2. The speakers will automatically search for each other. Once paired, a prompt sound will play, and both indicator lights will turn blue. The speakers will automatically set to the left and right channels.
3. Connect the speakers to your cell phone via Bluetooth (refer to operation instructions section). A voice prompt will confirm the successful connection. The speakers will now play music together in stereo.

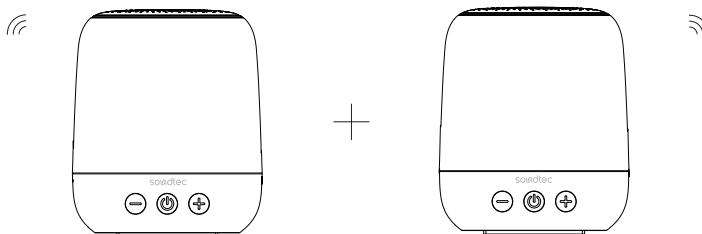

NOTES:

1. TWS requires two speakers to be turned on for operation.
2. Ensure the speaker is not connected to any other device before pairing with TWS.
3. In TWS mode, double-click the power button on either speaker to disable TWS pairing.
4. TWS has a memory function that automatically reconnects the paired speaker when turned on.

5. To disconnect one speaker, turn off the other, and they will both stop.

Charging Instructions

1. Important Tips

- a. Do not use an adaptor without CCC certification.
- b. The power input voltage is DC 5V. Please ensure to charge the speaker using a certified DC 5V adaptor.
- c. Charging the speaker with an adaptor offering power higher than DC 5V may damage the device.

2. Charging Procedure

- a. The speaker will emit a prompt sound and automatically turn off when the battery is low.
- b. Insert one end of the charging cable into the speaker's charging slot, and plug the USB end into a computer or mobile charger (5V 1A).
- c. The red indicator light will show when the speaker is charging. When fully charged, the indicator light will turn off.

3. Charging Time and Playback Duration

- a. Charging Time: Approximately 3 hours.
- b. Play Time: Around 5 hours (at maximum volume), or 8 to 10 hours (at medium volume).

Troubleshooting

1. Bluetooth connection issues:

- a. Turn off both the speaker and mobile phone, then power them on again and try to reconnect.
- b. If there are too many Bluetooth devices nearby, turn off the other devices.

2. Low or distorted sound:

- a. Low volume: The battery may be running low. Please charge it.
- b. Distortion: Adjust the volume on your mobile phone.

3. Sound repeatedly cuts off:

- a.** Check if the distance between the speaker and device is more than 10 meters.
- b.** Ensure there are no obstacles between the speaker and the device.
- 4.** Speaker is unresponsive:

Press and hold the power button for 10 seconds to reset the speaker.

- 5.** TWS mode issues:

If the sub-speaker turns off automatically, it may be due to a low battery. Charge it, then continue playing.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**