

PORODO
LIFESTYLE



Porodo Lifestyle

**HydroTunes
Bluetooth Speaker Tumbler**

SKU: PDLFSTBT



Table of Contents

Product Overview	2
Specifications	2
Important Notes	3
Operation & Connectivity Instructions	3
Button Function Description	4
Charging Guidelines	5
Cleaning and Maintenance	5
FCC Statement	5
Disposal	6
Warranty	7
Contact Us	7

Product Overview

The Porodo HydroTunes Bluetooth Speaker Tumbler is a versatile product combining a tumbler with high-quality Bluetooth sound capabilities. Designed with convenience in mind, it features a 1.2-liter capacity and a removable speaker base for easy portability, cleaning, and flexible speaker placement. The tumbler is made of durable SUS304 stainless steel, ensuring reliable performance, and is equipped with a leak-proof silicone lid that prevents any spills, even when turned upside down. Additionally, the tumbler supports USB-C charging for quick and hassle-free power replenishment, making it an ideal choice for those who value both functionality and practicality.

Specifications

Input	DC 5V/1A
Bluetooth Version	5.3
Battery Capacity	300mAh
Charging Interface	Type-C
Material	304 Stainless Steel
Capacity	40oz (1.2L)
Speaker Output Power	3W
Frequency Response	80Hz-20kHz
Signal-to-Noise Ratio	75dB
Model Number	PDLFSTBT

Important Notes

1. Please read this manual carefully before using the device.
2. Remove the speaker from the body of the cup before cleaning.
3. Charge the speaker using the provided power adapter (output voltage: 3.2-4.2V).
4. Charge the device fully before using it for the first time.
5. Any changes or modifications not approved by the responsible party could cancel your right to operate the device.
6. This device complies with part 15 of the FCC Rules. The operation of this device is subject to the following two conditions:
 - a. It may not cause harmful interference.
 - b. it must accept any interference received, including interference that may cause undesirable operation.
7. The included USB cable is for charging only.

Operation & Connectivity Instructions

1. Powering On the Device

- 1.1. Press and hold the power button on the Bluetooth speaker for a few seconds to turn it on.
- 1.2. Once powered on, the speaker will enter Bluetooth search mode automatically and be ready for pairing.

2. Bluetooth Connection Instructions

- 2.1. After powering on the device, make sure the Bluetooth on your phone or other device is enabled.
- 2.2. Look for the device name "BT- spoak" in the available Bluetooth devices list on your phone or Bluetooth-enabled device.
- 2.3. Select "BT- spoak" from the list to connect. Once connected, the device will indicate that the connection is successful, and you can start playing music or other audio through the speaker.

3. FM Mode


3.1. If you wish to switch to FM radio mode, quickly press the power button several times while in Bluetooth mode. This will switch the speaker to FM mode.

3.2. Once in FM mode, plug the charging cable into the Type C port to begin using the FM function.

3.3. The device will start scanning for available radio stations automatically. You can press the buttons to adjust and select a specific radio station.

3.4. To return to Bluetooth mode, press the power button again to exit FM mode and re-enter Bluetooth search mode.

Button Function Description

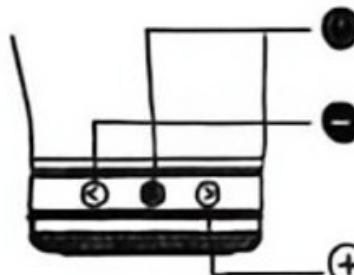

Power Button: Press and hold to turn the device on or off.

Volume Down: Press and hold to decrease the volume.

Press the button briefly to play the previous song.

Volume Up: Press and hold to increase the volume.

Press briefly to play the next song.

Other features:



Charging Port (Type C): For charging the device.

LED Indicator: The LED light will turn on when the device is powered on.


TF Card Slot: Supports TF cards for music playback.

Charging Port (Type C): For charging the device.

Charging Guidelines


Use the included USB cable to charge your Bluetooth speaker tumbler via the USB port on a computer or a power adapter.

Low Power Warning: When the battery voltage drops below 3.3V, the message "low battery, please charge" will appear. Please charge the device as quickly as possible to avoid interruption in use.

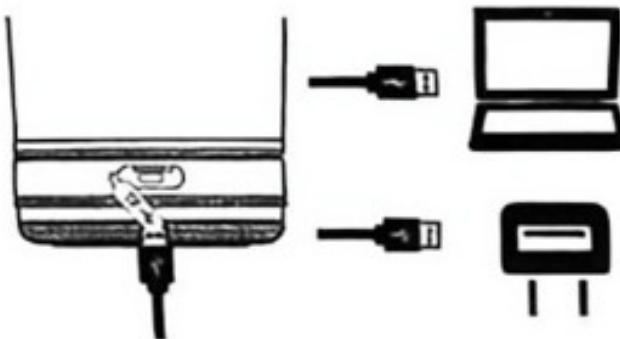

Cleaning and Maintenance

To clean the water cup, first remove the speaker to avoid any damage. It is recommended to wash the cup by hand with a non-abrasive cleaner. For the speaker, wipe it gently with a damp cloth to maintain its condition.

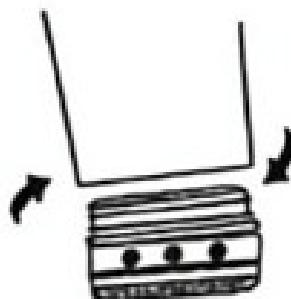

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference; and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for assistance.

RF warning statement:

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at <https://www.porodo.net/warranty> and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

<https://www.porodo.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: <https://www.porodo.net/>

Service Support: support@porodo.net

Instagram: [porodo](#)