

**PORODO**  
LIFESTYLE



**Porodo Lifestyle**  
**GOBO**  
**Portable Air Projector**

SKU: PDLFSTH1PGY

# Table of Contents

Product Overview	2
Specifications	2
Package Contents	3
Product Ports and Controls	4
Button and Port Functions	5
Installation Guide	5
Operation Instructions	6
HD Devices Connection	7
Home Screen Overview	8
Applications Management	9
System Settings	9
Eshare & AirPlay Setup	10
Wi-Fi Connection Setup	10
Bluetooth Connection Guide	11
Projection Settings	12
Language Settings	13
Safety Precautions	13
Disposal	14
Warranty	15
Contact Us	15

## Product Overview


The Porodo Gobo Portable Air Projector is a compact and versatile media player offering up to 2 hours of playtime. It supports screen sizes from 35" to 150" with 1080P full HD resolution for an enhanced viewing experience. Powered by Android 13, it allows easy access to apps and media. With multiple connectivity options, air projection technology, and over-temperature protection, the Gobo projector ensures reliable and safe use.

## Specifications


Battery Capacity	3200mAh
Power	42W
RAM	1GB
ROM	8GB
OS	Android 13
WiFi	2.4G/5G
Working Time	2h
Contrast Ratio	1000:1
Throw Ratio	1.15:1
Screen Ratio	1.15:1

Brightness	150 ASNI
Resolution	1280x720P
Bluetooth Version	5.0
Port Types	USB-C, USB 2.0, HDMI
LCD Panel Size	2.1"
Product Weight	0.81Kg
Product Size	84 x 100 x 170mm
Model Number	PDLFSTH1P

## Package Contents

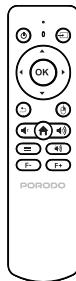

Remote Control ×1

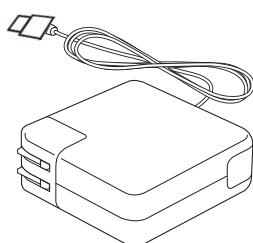

Power Cable ×1



HDMI Cable ×1

# Product Ports and Controls



## Button and Port Functions

1. On/Off Key: Press and hold for 3 seconds to turn on the device, preventing accidental operation.
2. Power Indicator: The light stays on while charging and turns off when fully charged.
3. Reset Hole: Use the card needle to insert into the reset hole in case of a system crash.
4. HD: Port for connecting to a high-definition display.
5. USB: Universal USB ports for device connectivity.

## Installation Guide

### 1. Choosing a Location

Before choosing an installation location for your projector, consider the following factors:


- a. The size and position of your screen
- b. The location of the electrical outlet
- c. The distance between the projector and other equipment

Your projector can be installed in the following ways:

### 2. Front-Desktop:

Place the projector near the floor in front of the screen. This is the most common setup, offering quick installation and portability. Turn on the projector and select the following settings:


Setting > Projection Settings > Projection Method > Front-Desktop.

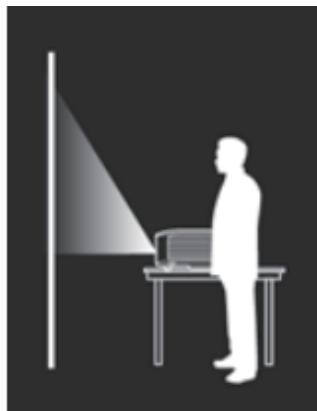

### 3. Front Ceiling:

Install the projector suspended from the ceiling in front of the screen. Turn on the projector and select the following settings:

Setting > Projection Settings > Projection Method > Front Ceiling.

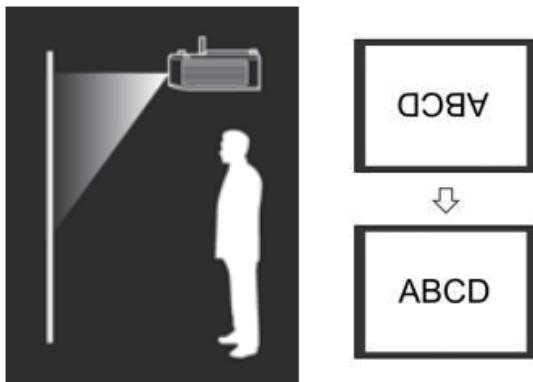

## Operation Instructions

### Starting the Projector

1. Connect the power cable to both the projector and a power outlet. Turn on


the power outlet switch. The Power indicator on the projector will turn red once power is supplied.

**Note:** Always use the provided power cable to avoid potential risks such as electric shock or fire.

**2.** Press the power button on the projector or remote control to turn it on. The power indicator will change to yellow-green, and the fans will start running. A startup image will appear on the screen while the projector warms up. During this process, the projector will not respond to any commands.

### **3. Adjust the Image**

Make sure the image is aligned correctly, as shown on the right. The left image is misaligned, while the right one is correct.

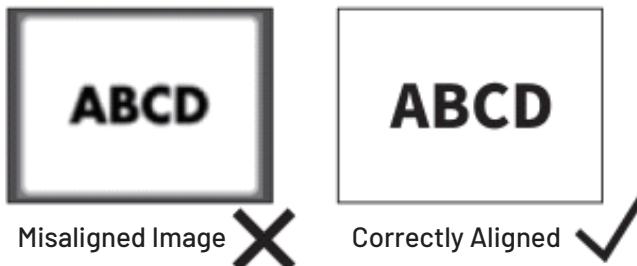


## **HD Devices Connection**

HD allows video data to be sent without compression between devices like laptops, DVD players, Blu-ray players, digital tuners, and displays using an HDMI cable. To connect, first make sure the device is connected to Wi-Fi or a hotspot. Once the connection is made, link the projector and HD device.


Connection Method: HDMI cable.

Supports HD devices allowing you to connect HD cables to access devices like computers, laptops, DVD players, digital tuners, Chromecast, Fire TV, televisions, set-top boxes, game consoles, and others.

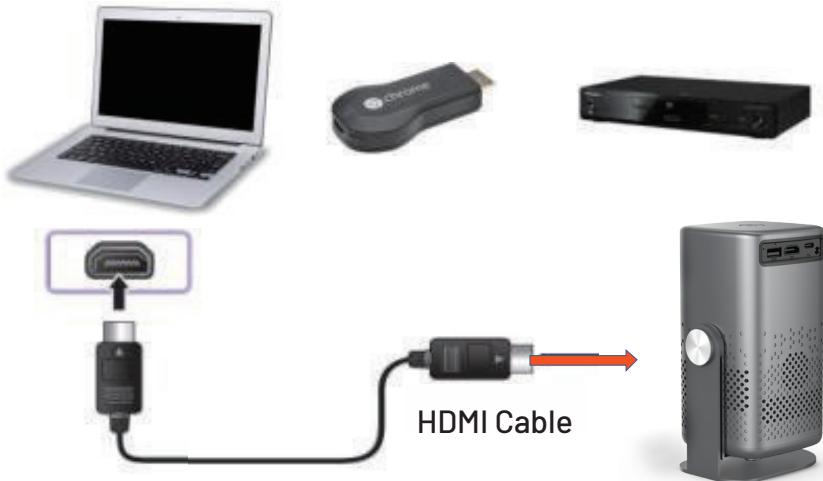


## Home Screen Overview

The homepage displays options such as App Center, Cast, Miracast, Chrome, File Browser, Video, Uninstall, Source, Settings, Apps, and more. The "Source" section serves as the entry point for connecting external devices. To download applications, click on the "Play Store" icon.

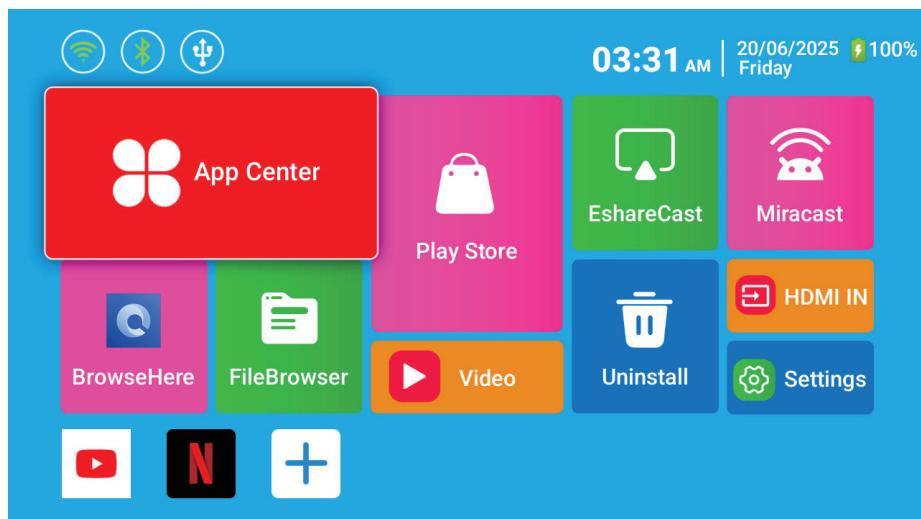


# Applications Management

Click "APP" on the home page to view installed programs. To add a program to the home page, simply click its icon.

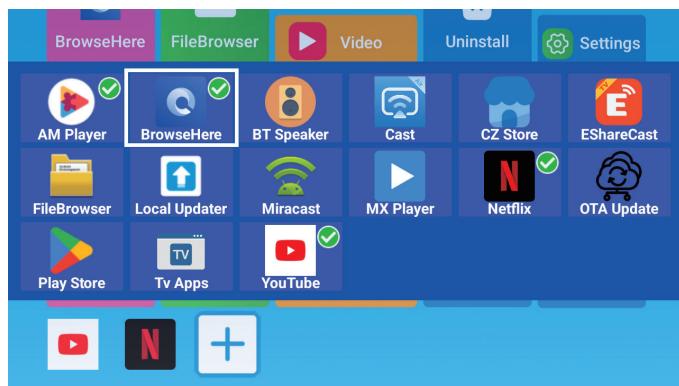

# System Settings


This section allows you to manage the basic settings, application settings, software versions, network settings, network settings, Bluetooth settings, projection settings, language settings, date settings, system updates, and other machine settings.

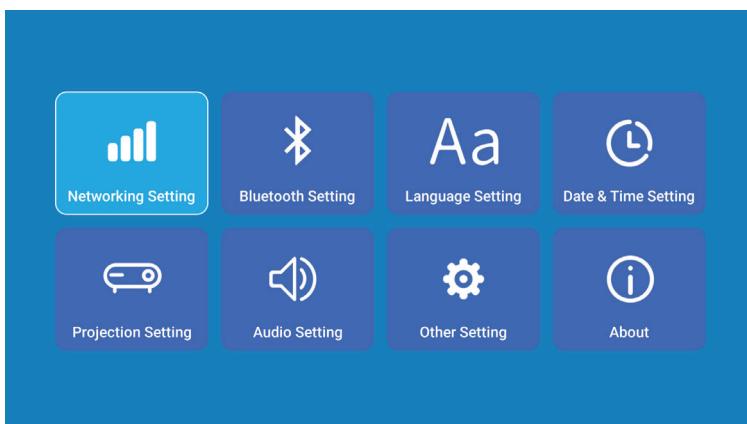

## ◀ Eshare & AirPlay Setup

To connect an Android Mobile/Tablet with a projector using Wi-Fi display technology, follow these steps:

1. Ensure the Android device is connected to the same network as the projector.
2. Launch wireless display on your mobile device, tablet, or TV.
3. The projector will display the connection screen, as shown in the image.

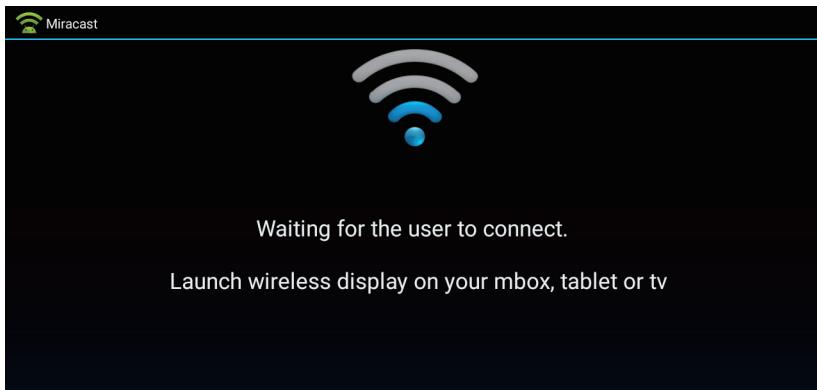

For iOS devices:


1. Ensure your iOS device is connected to the same network as the projector.
2. Open the EShare app on your iOS device and select the projector from the device list.

## ◀ Wi-Fi Connection Setup

To watch videos online, the user must first connect to Wi-Fi or set up a hotspot. After connecting to the network, the video can be accessed.

1. Select the network and connect.
2. The connected network will be shown as "Connected" on the screen.

**Note:** You can refresh the Wi-Fi list by clicking the Refresh Wi-Fi button.

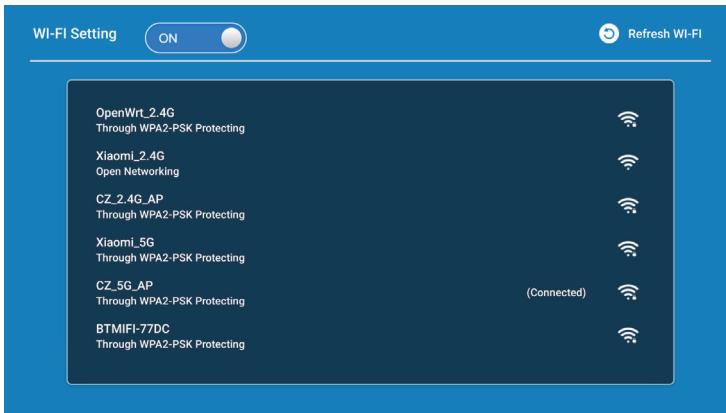

## Bluetooth Connection Guide

To connect Bluetooth devices such as Bluetooth phones, speakers, or headsets, follow these steps:



1. Ensure Bluetooth is turned on.
2. The device will search for available Bluetooth devices.
3. Select the device you wish to pair from the list of available devices.
4. Once paired, the device will appear under "Paired Devices."

**Note:** The projector Bluetooth name is "H1P".



# Projection Settings

The user can adjust the installation mode for either front or rear projection. Keystone correction can be applied for vertical or horizontal adjustments, including a four-point trapezoid correction. Automatic keystone correction is enabled by default. The infinite zoom option allows for horizontal and vertical scaling adjustments.

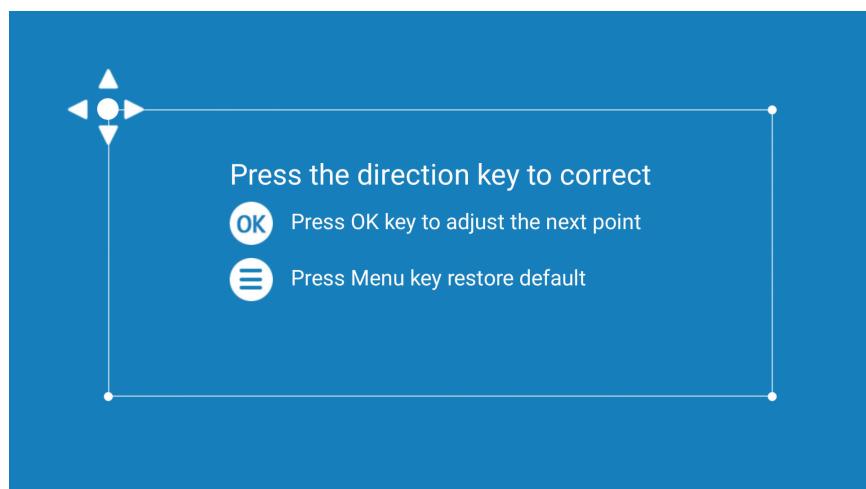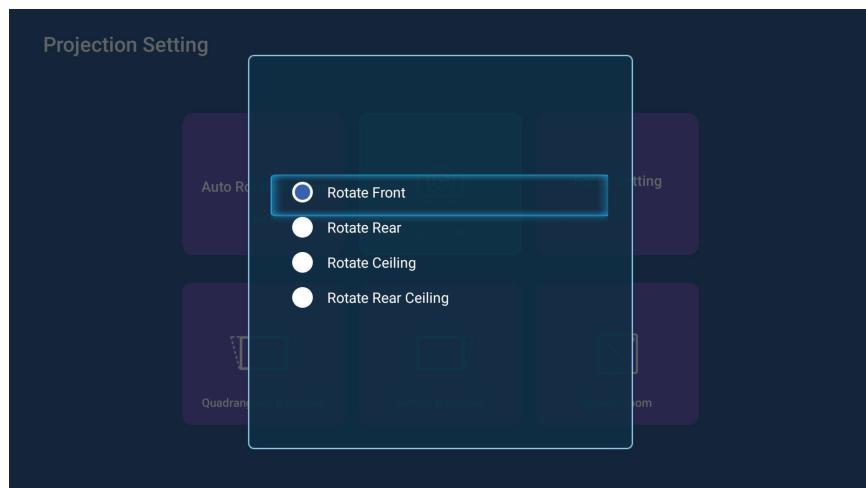

## Language Settings

By default, users can choose from several languages, including Chinese, Korean, and others. This version defaults to English, with the option to select from various English variants.



## Safety Precautions

1. Use the product only as described in this manual.
2. Do not look directly into the lens while the projector is operating.
3. Avoid placing cloth or any objects that may block the projector's ventilation holes.
4. The projector is not waterproof; do not place items such as vases or cups around it.
5. Store and use the projector in a dry and clean environment.
6. Turn off the projector and disconnect the power supply when not in use for an extended period.
7. Use original factory foam and shockproof materials when transporting the projector.

8. If the projector is defective, do not attempt to repair it yourself. Contact the distributor or manufacturer.
9. To prevent electric shock, do not disassemble or attempt to repair the device. Improper repairs may cause electric shock or injury.

## Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



## **Warranty**

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at <https://www.porodo.net/warranty> and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

<https://www.porodo.net/warranty>

## **Contact Us**

If you have any questions about this Privacy Policy, please contact us at:

**info@porodo.net**

Website: <https://www.porodo.net/>

Service Support: [support@porodo.net](mailto:support@porodo.net)

Instagram: **porodo**