

PORODO
LIFESTYLE



Porodo Lifestyle
POWERMAX Turbo Blower Fan
with LED Light

SKU: PDTB2432BK

Table of Contents

Product Overview	2
Specifications	2
Package Contents	3
Product Design	3
Button Control	4
Charging Instructions	4
Usage Instructions	4
Air Nozzle Installation Instructions	5
Safety Precautions	5
Disposal	6
Warranty	7
Contact Us	7

Product Overview

The Porodo LifeStyle POWERMAX Turbo Blower Fan with LED Light is a compact yet powerful device designed for optimal performance and convenience. Equipped with a 200W high-speed motor, it delivers an impressive airflow with speeds reaching up to 130,000 RPM. The fan offers five adjustable speed levels, allowing you to customize the airflow to your preference. Additionally, the integrated LED light function provides illumination in low-light environments, making it versatile for various settings. With its sleek black design and ergonomic shape, the POWERMAX Turbo Blower Fan is a stylish and practical solution for cooling or drying in homes, offices, or outdoor spaces.

Specifications

Input	5V/2A
Rated Power	200W
Battery Capacity	8000mAh
Working Time	2.5H
Recharge Time	2.5H
Motor Speed	130000RPM

LED Lighting Power	1W
Charging Interface	Type-C
Product Size	36 x 78 x 150mm
Product Weight	286g
Model Number	PDTB2432

K Package Contents

Host (1 unit)
 Power Cord (1 piece)
 Nozzles (2 pieces)
 Lanyard (1 piece)

K Product Design



Button Control

- 1. Power On:** To turn on the device, press and hold the power button for a few seconds.
- 2. Adjusting High Wind Speed:** To increase the wind speed, press and hold the power button to switch to high wind speed mode.
- 3. Adjusting Low Wind Speed:** For a lower wind speed, simply press the power button once.
- 4. Shutting Down:** To turn off the device, press the power button once again. The device will power off with a cyclic lifting feature.

Charging Instructions


- 1. Charging While in Use:** The device can only operate at the lowest fan speed while charging.
- 2. Shutting Down Before Use:** Ensure the device is in shutdown mode before charging. Do not turn on the device during the charging process to avoid potential issues.

Usage Instructions

- 1. Power-On:** The fan speed gradually increases from the lowest speed to the setting where the stepless speed control button is located.
- 2. Power-On State and Wind Speed:** To view the power status when the device is powered on, press and hold the power button. The display will show the current wind speed. Hold the button for 5 seconds to switch between wind speed and battery percentage.

3. Shutdown State and Power Indicator: To check the power level in shutdown mode, press and hold the power button. The display will show the battery percentage.

Air Nozzle Installation Instructions

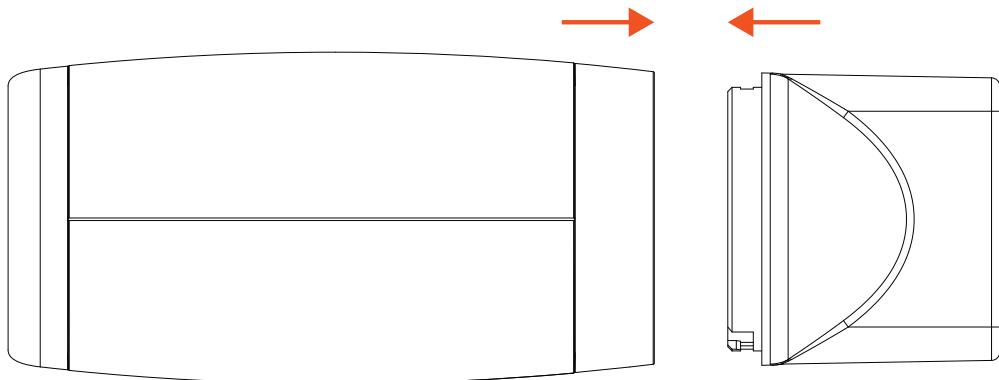

1. Align the Air Nozzle: Ensure that the air nozzle is properly aligned with the main engine air outlet to establish a secure connection.

2. Tighten the Connection: Rotate the nozzle clockwise to tighten it securely in place, ensuring a firm connection for optimal performance.

3. Loosen the Nozzle: To remove or adjust the nozzle, rotate it counterclockwise to loosen the connection.

Safety Precautions

1. Supervision Required: Do not allow children or individuals who are not familiar with the manual to operate this product.

2. Avoid Insertion into Moving Parts: Never insert fingers or any other objects into the fan grille, fan cover, or moving blades to prevent injury.

3. Keep Clear of Moving Parts: Ensure that your hair, clothing, and other fabrics are kept away from the fan to prevent entanglement and potential hazards.

4. Proper Disposal: When disposing of this product, please disassemble the casing and remove the battery. Dispose of the components according to your local environmental protection regulations to ensure safe and eco-friendly disposal.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at porodo.net/warranty and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**