

PORODO
LIFESTYLE



Porodo Lifestyle

Clothing Bakhoor Hanger

SKU: PDLFST212

Table of Contents

Product Overview	2
Specifications	2
Product Features	2
Operation Guide	3
Safety Precautions	4
Disposal	4
Warranty	5
Contact Us	5

Product Overview

The Porodo Lifestyle Clothing Bakhoor Hanger is a smart and elegant solution for your clothes storage and aromatic experience. With a maximum height of 156 cm, it offers ample space while maintaining a sturdy and steady structure. Its smart design features an easy-move base for convenient mobility, hanger hook design for easy clothes hanging, and ventilation holes to ensure proper air circulation. Ideal for use with Bakhoor, it helps maintain a pleasant fragrance while keeping your clothes neatly organized.

Specifications

Material	Iron
Product Size	30 x 30 x 156cm
Product Weight	4.36kg
Model Number	PDLFST212

Product Features

Sturdy and Stable Construction: Built with durable materials for long-lasting support.

Adjustable Height: The hanger can be adjusted up to 156 cm for different clothing sizes.

Hanger Hook Design: Includes an easy-to-use hook for secure clothing storage.

Easy-Move Base: Equipped with a stable base that allows for easy movement and repositioning.

Ventilation Holes: Designed with ventilation holes to enhance air circulation and keep clothes fresh.

Space-Saving Design: Compact design makes it suitable for various spaces, including bedrooms, closets, and offices.

Elegant Appearance: Modern and sleek design that complements any interior.

Versatile Use: Perfect for hanging clothes or accessories, providing a flexible storage solution.

Easy Assembly: Quick and simple to assemble for immediate use.

Operation Guide

1. Set up the Burner:

- a.** Place the Porodo Clothing Bukhour Incense Burner on a flat, stable surface.
- b.** Ensure the non-skid base is in full contact with the floor or table to prevent the burner from moving or tipping over during use.

2. Adjust the Height:

- a.** The burner stands at 156 cm, which is ideal for hanging clothes of various lengths.
- b.** Simply hang your garment by placing it on the hanger hook at the top of the burner. Ensure the garment is properly aligned to avoid any wrinkles or uneven hanging.

3. Insert Incense:

- a.** Open the incense holder located at the base of the burner.
- b.** Place your chosen incense in the designated compartment, ensuring it is securely positioned.
- c.** Light the incense with a match or lighter, making sure the incense is burning evenly before proceeding.

4. Ventilation:

- a.** The incense ventilation holes are designed to allow the smoke to circulate freely and disperse the fragrance effectively.
- b.** Position the incense burner in a well-ventilated area to ensure optimal scent diffusion.

5. Allow Wrinkle Removal & Scenting:

- a.** As the incense burns, the heat generated will help remove wrinkles from your clothes.
- b.** The smoke and scent will infuse the fabric, providing a fresh, pleasant fragrance and making your clothes smell clean.
- c.** Depending on the thickness of the fabric, allow 15-30 minutes for the best results.

Safety Precautions

- 1. Never Leave Unattended:** Always monitor the incense burner while it is in use. Never leave it unattended, especially when the incense is burning.
- 2. Keep Away from Flammable Materials:** Ensure the burner is placed on a non-flammable surface, away from curtains, paper, or any other materials that could catch fire.
- 3. Proper Ventilation:** Always use the burner in a well-ventilated area to avoid smoke buildup and ensure a safe, breathable environment. Avoid using it in enclosed spaces without airflow.
- 4. Stable Surface:** Place the incense burner on a flat, stable surface to prevent tipping or movement. Ensure the non-skid base is fully engaged with the floor for added stability.
- 5. Keep Out of Reach of Children and Pets:** Store and use the burner in locations that are not accessible to children or pets to avoid accidents or burns.
- 6. Burn Incense Safely:** Always light the incense carefully and make sure the flame is completely extinguished when you're done. Do not attempt to relight incense once it has burned out.
- 7. Allow Cooling Before Handling:** After use, let the burner cool down before touching it or moving it. This helps to avoid burns from hot surfaces.
- 8. Proper Storage:** When not in use, store the burner in a dry, safe location, away from heat sources and direct sunlight. Ensure the incense holder is clean and free of residue.
- 9. Avoid Overloading Incense:** Only use the recommended amount of incense in the burner's compartment to prevent excess smoke or potential fire hazards.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at <https://www.porodo.net/warranty> and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

<https://www.porodo.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: <https://www.porodo.net/>

Service Support: support@porodo.net

Instagram: [porodo](#)