

**PORODO**  
LIFESTYLE



**Porodo Lifestyle**  
**PORTABLE**  
**DUAL-CUP SMOOTHIE BLENDER**

SKU: PDGCZ0710WH

# Table of Contents

Product Overview	2
Specifications	2
Product Sections	3
Setup Guide	4
Battery Maintenance	8
Product Cleaning	8
Safety Precautions	9
Important Notes	10
Common Mistakes	11
Function and Display	12
Material Compliance Table	13
Environmental protection list	14
Disposal	16
Warranty	16
Contact Us	16

## Product Overview


The Porodo Portable Dual-Cup Smoothie Blender is a versatile and compact blender designed for convenience on-the-go. It features a powerful 20-blade stainless steel system for efficient crushing, capable of blending fruits, ice, and other ingredients smoothly. With two cup sizes (600ml and 800ml) and dual-cup versatility, it's ideal for personal or shared servings. The blender is equipped with a USB-C rechargeable battery for portability and comes with a secure handle strap and a leak-proof lid for easy carrying and drinking. Its high-quality materials ensure durability, and the 2D-blade design guarantees efficient blending. Perfect for quick smoothies or shakes anywhere!

## Specifications

Input	5V
Rated Power	80W
Rated Voltage	7.4V
Battery Capacity	2 × 1300mAh
Juicing Capacity	350mL (Short Cup), 500mL (Tall Cup)
Motor Speed	18,500RPM
Full Capacity	600mL (Short Cup), 800mL (Tall Cup)

Blade Material	SUS304 Stainless Steel
Charging Interface	USB-C
Model Number	PDGCZ0710

## Product Sections

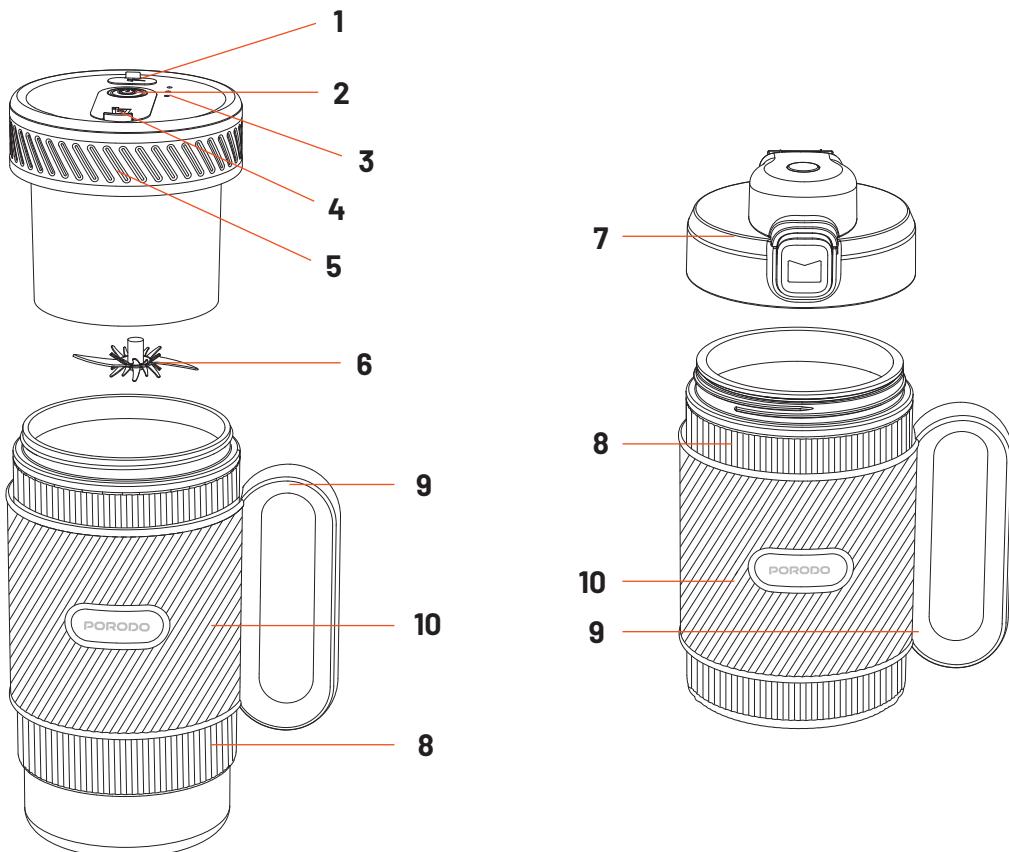

<b>1. SB Charging Port</b>	<b>6. Blade</b>
<b>2. Switch Button</b>	<b>7. Direct Drinking Lid</b>
<b>3. Indicator Light</b>	<b>8. High Transparency Cup</b>
<b>4. Straw Socket</b>	<b>9. Handle</b>
<b>5. Cup Holder</b>	<b>10. Handle Cover</b>

If this product is changed due to technical upgrade, appearance change, function optimization, etc., please refer to the actual product.

## Setup Guide


**1.** Take out the mixing cup and cup sleeve, clean them with food detergent and dry them for later use; The bottom of the blade holder is not suitable for washing and soaking in water; Wipe the exterior of the host with a damp cloth.



Clean with  
food detergent




Dry after washing

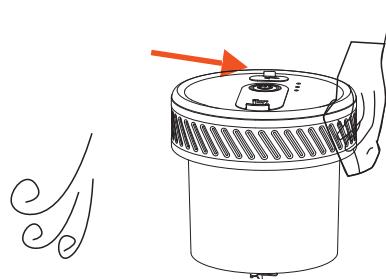


Be careful of the  
blade hurting your hands

**2.** Make sure the battery is fully charged for the first time.  
The blue light flashes while charging, and it stays on when fully charged.

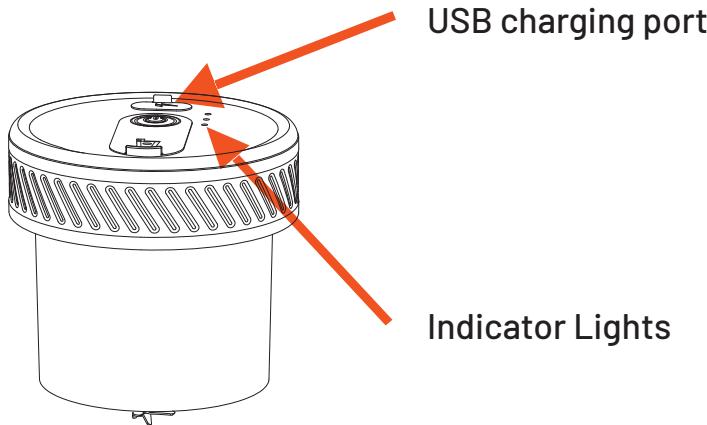


3. Wash the fruit, peel and core it, cut it into pieces of about  $10\times10\times10\text{mm}$ ; add water or milk until the water level does not exceed the Max line.

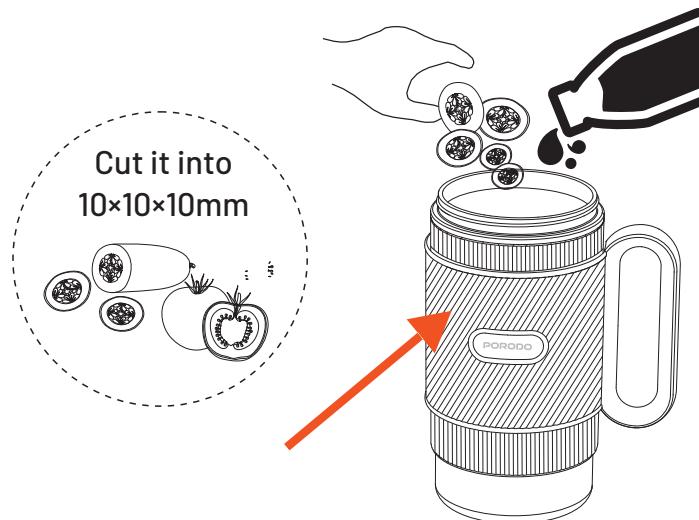

**Caution:**

Do not put food above 60°C.


4. Turn the host clockwise to the mixing cup (the blue light flashes 3 times after tightening).

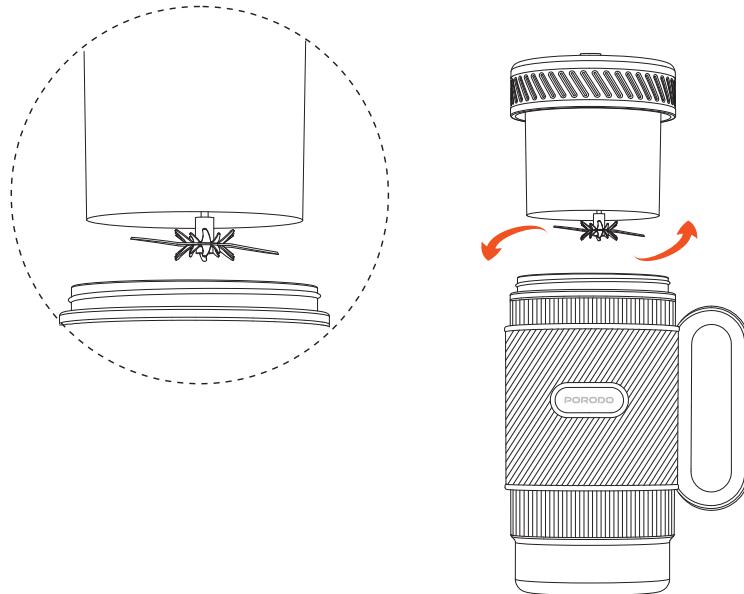

**Note:** When the safety switch is in the off state, double-clicking the "Switch button" will cause the red and blue lights to flash alternately three times.


**5.** Double-click on the "Switch button" to start the product, and then invert the product for stirring and juicing;

When the mixing effect is not good, please stir again.

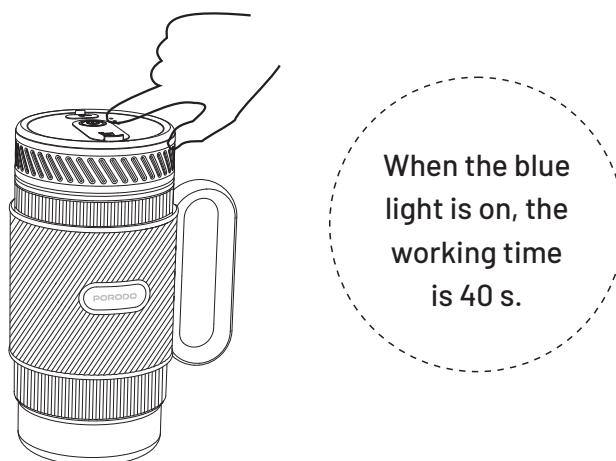

**Note:**

1. Press the “Switch button” during work to stop the product.
2. When the food is stuck, the red light flashes 5 times.
3. When the battery voltage is too low, the red light is on for 30 seconds.
6. After the production is completed, put the product upright, turn on the host and drink.

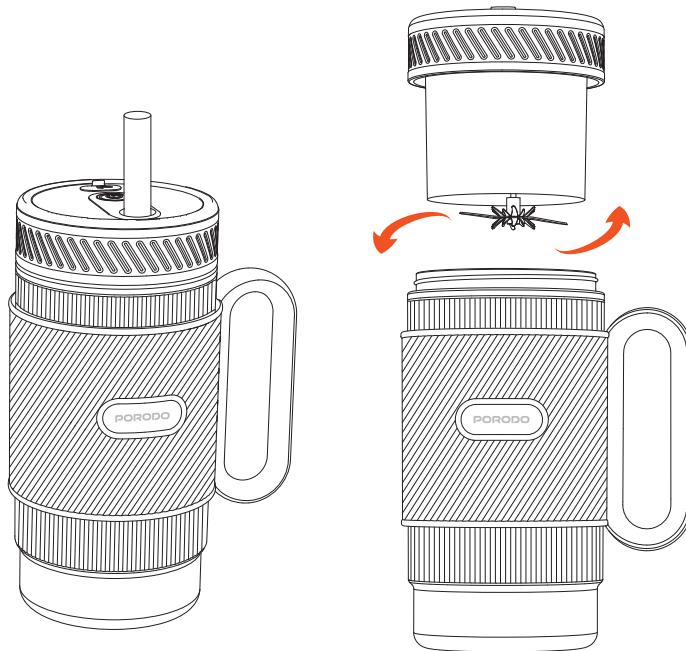

**(Note:** Please use a 5V-1A specification mobile phone adapter to charge this product. Due to the recognition limitations of some brand mobile phone adapters on electrical devices, the actual output voltage and current cannot reach 5V-1A, resulting in the indicator light not turning on during the charging process and the charging time being extended. To avoid such problems, please use a universal 5V-1A specification mobile phone adapter purchased from legitimate channels to charge the product.)

**7.** The maximum working time under load is 40 seconds. After working for 40 seconds, it stops for 2 minutes. After two consecutive cycles, it must stop for 15–20 minutes. The no-load spindle speed is 18,000 rpm.

## **Battery Maintenance**

This product uses high-performance lithium batteries designed for long-lasting durability. To ensure optimal performance and longevity, please follow these guidelines carefully:

- 1. Initial Use:** Before using the product for the first time, fully charge the battery.
- 2. Charging & Discharging:** Overcharging or deep discharging can damage the battery. Recharge it promptly when the power is low, and unplug the charger once fully charged.
- 3. Long-Term Storage:** If the product will not be used for an extended period, fully charge it before storing. Recharge and discharge the battery at least once every six months.
- 4. Temperature Performance:** Lithium battery efficiency may slightly decrease in extremely cold or hot conditions—this is normal.
- 5. Charging Adapter:** To reduce unnecessary cost and resource use, a charging head is not included. Please use a 5V-1A universal mobile phone adapter purchased through authorized channels.

## **Product Cleaning**

- 1.** Ensure the mixing blade has completely stopped before cleaning.
- 2.** Avoid using abrasive tools such as steel wire balls or hard brushes to prevent surface damage.

3. Wipe the host with a damp cloth that has been wrung out. Do not wash or immerse the product in water or other liquids to prevent damage or leakage.
4. Rinse the inside of the cup and all parts that come into contact with food using water. Wipe or air-dry them promptly. Handle with care to avoid injury.
5. If the product will not be used for an extended period, ensure it is thoroughly cleaned and dried. Store it in a ventilated, dry place to prevent moisture from affecting performance.
6. Quick Cleaning: Add a suitable amount of water to the mixing cup, attach it to the host, and double-click the "On/Off" button to run for 5-10 seconds.

## Safety Precautions

### **Danger:**

1. Do not immerse the base components in water or rinse them under running water.
2. Do not place the base assembly in the refrigerator.

### **Warning:**

1. Do not insert your fingers or any objects into the juicer cup while it is operating.
2. If any main components or accessories are damaged, stop using the juicer and contact your dealer for repair guidance.

Keep the product out of reach of

3. children to prevent accidents or misuse.
4. This product is not intended for use by individuals with physical disabilities, mental disorders, or limited cognitive abilities (including children). If such individuals use the product, they must be supervised or assisted by a responsible adult.

5. For your protection, please use only the accessories provided with the product.
6. When removing the cutting blade, emptying the mixing bowl, or cleaning the product, handle the blade carefully to avoid hand injuries.

## Important Notes

1. This appliance is designed for household use only. Do not use it for commercial purposes.
2. Do not use accessories or components from other manufacturers. Doing so may cause damage and void the warranty.
3. Before each use, inspect the product's exterior to ensure all parts are properly assembled and undamaged.
4. After operation, the transparent cup body can be detached only when the power is off and the blade has completely stopped.
5. Dispose of used batteries properly according to local regulations.
6. To prevent burns or injury, read the instruction manual carefully and follow all safety guidelines.
7. Do not blend overheated ingredients or liquids above 60°C, as this can cause splashing, scalding, or damage.
8. The default operation time is 40 seconds. Avoid continuous use to prevent overheating and extend the product's lifespan. Do not leave it running in idle mode.
9. This appliance features an overload protection system. If the blade stops due to oversized ingredients, the product will shut off automatically. The red light will flash 5 times, then stay on for 10 seconds. After removing excess ingredients, the device can be restarted.
10. Use this product only for blending fruits and vegetables with sufficient liquid. Do not blend hard materials such as grains.

### Additional Instructions:

1. This product is not intended for users with weak physical fitness, delayed reactions, or mental disorders unless supervised by a responsible person. Children and individuals with disabilities must not use it unsupervised.
2. For repairs, contact the authorized service center or designated repair point. Do not disassemble the product yourself.

- 3.** Avoid high temperatures, strong magnetic fields, or flammable environments to prevent fire or component damage.
- 4.** Do not place parts in a dishwasher, microwave, or hot water above 60°C for cleaning or disinfection, as this may cause deformation or damage.
- 5.** The product includes a built-in lithium battery. Please observe the following:
  - 6.** Charge promptly when the battery is low.
  - 7.** Charging may slow down below 10°C or when using a computer port – this is normal.
  - 8.** Operate and store in environments between 0°C and 40°C.
  - 9.** If unused for extended periods, recharge every six months to prevent battery degradation.

## Common Mistakes

Fault conditions	Reason	Solution
The machine fails to power on or shuts down during use, with the indicator light showing a steady red light for 30 seconds.	Low battery	Please charge in time
Blue light flashes 5 times during use	Blade stuck	Remove the ingredients stuck on the blade and restart
Water leakage	Silicone ring is not installed in place or the cup body is not tightened	Reinstall the silicone ring and tighten the blender cup
The charging indicator light is off	1. The USB cable is improperly connected. 2. Due to the recognition restrictions of some brands of mobile phone adapters on electrical equipment, the actual output voltage and current are less than 5V-1A.	1. Check the USB cable connection status to ensure that the connection is normal. 2. Please use the 5V-1A standard universal mobile phone adapter purchased from regular channels to

The fault descriptions cover most of the possible situations you may encounter. If your issue is not listed, please stop using the product and contact your dealer for assistance.

If you are uncertain whether the charger you are using complies with the required standards, please consult your dealer for guidance.

Under no circumstances should you attempt to repair or modify the product yourself, as this may pose risks to personal and property safety.

For faster troubleshooting, please refer to the relevant sections under "Indicator Lights."

## **Function and Display**

### **1. Safety Switch**

When the safety switch is closed, three blue lights flash three times.

### **2. Power On/Off Button**

Double-click to start. The machine operates for 40 seconds, then stops automatically while the blue battery indicator remains on.

If the battery is low, the red light flashes for 30 seconds before the device stops.

If the safety switch is not turned off, pressing the power button will cause the blue and red lights to flash alternately three times.

### **3. Charging**

When the battery is low, the first blue light flashes.

At approximately one-third charge, the first blue light stays on and the second begins flashing.

At around two-thirds charge, the first and second lights stay on while the third flashes.

When fully charged, all three blue lights remain steadily on.

#### 4. Motor Stall Due to Tool Jamming

If the blade becomes jammed during operation, the motor will stall, the red indicator will flash five times, and the machine will automatically shut down.

#### 5. Minutes of Protection Mode

If the machine is turned on more than five times within five minutes, it will automatically enter protection mode.

The device will be forced to stop for 3 minutes, with the three blue lights and one red light flashing alternately for 60 seconds.

## Material Compliance Table

This product meets the requirements of the corresponding national food safety standard GB4806.1-2016, and the conformity information of the "food contact" material and its implementation standard is described as follows:

Component Name	Material (brand/ingredient)	Execution standards	Detection result	Remarks
Blade holder/Cup lid	ABS	GB4806.7-2023	Meet standard requirements	
Blade assembly	Stainless steel (food contact)	GB4806.9-2023	Meet standard requirements	
Juice cup	PC	GB4806.7-2023	Meet standard requirements	
Sealing element	Polydimethylsiloxane	GB4806.11-2023	Meet standard requirements	

#### Note:

1. Special use instructions: Please use this product strictly in accordance with the instructions and attachments.
2. The food contact parts of this product are included in the table above; some models may not contain individual materials, subject to the actual product.

# Environmental protection list

According to the Law of the People's Republic of China on the Administration of the Use of Hazardous Substances in Electrical and Electronic Products, the names and contents of harmful substances or elements that may be contained in electrical and electronic products are listed in the following table.



Part name	Poisonous or harmful substance or element					
	(Pb)	(Hg)	(Cd)	(Cr (VI))	(PBB)	(PBDEO)
Cup lid	○	○	○	○	○	○
Base	○	○	○	○	○	○
Cup body	○	○	○	○	○	○
Lead wire	○	○	○	○	○	○
PCB board	○	○	○	○	○	○
Battery	○	○	○	○	○	○
Motor	○	○	○	○	○	○
Blade	○	○	○	○	○	○
Charging cable - Connector white plastic sheath	X	○	○	○	○	○
Charging cable - self-colored cable leather	X	○	○	○	○	○
Charging Cable - White thin wire sheath	X	○	○	○	○	○
Charging cable - Plug sheath	X	○	○	○	○	○
Charging cable - Solder	X	○	○	○	○	○
Motor - Solder	X	○	○	○	○	○
PCB board - Solder	X	○	○	○	○	○
PCB board - chip resistor	X	○	○	○	○	○
PCB board - Small PCB solder	X	○	○	○	○	○

## Declaration of Hazardous Substances:

According to the "Requirements for Restricting the Use of Hazardous Substances in Electronic and Electrical Products" (GBT 26572-2011, also known as China RoHS2.0), the following section lists the substances and their contents that may be included in this product.

This table complies with the provisions of SJ/T 11364.

O: Indicates that the content of the hazardous substance in all homogeneous materials of the component is within the limit requirements specified in GB/T 26572 (IEC62321).

X: Indicates that the content of the hazardous substance in at least one homogeneous material of the component exceeds the limit specified in GB/T 26572. However, the content of the parts marked X exceeds the limit because there is no mature alternative technology in the industry.

## Environmental Protection Usage Period:

The mark on the product body indicates that the environmental protection usage period is 10 years.

The environmental protection service life of electronic and electrical products refers to the period during which toxic and harmful substances or elements contained in electronic and electrical products will not leak or suddenly migrate to the outside. Additionally, users of electronic and electrical products will not cause serious pollution to the environment or cause damage to human health and property when using the products.

During the environmental protection period, please use this product according to the instructions.

## "Regulation on the Administration of the Recovery and Disposal of Waste Electrical and Electronic Products" Reminder:

To protect the earth and conserve resources, when the user no longer needs this product or the product life ends, please comply with the national waste electrical and electronic products recycling. In accordance with relevant laws and regulations, it will be handed over to the local recycling qualified manufacturers with national recycling processing.

## **Disposal**

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

## **Warranty**

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:  
**porodo.net/warranty**

## **Contact Us**

If you have any questions about this Privacy Policy, please contact us at:  
**info@porodo.net**  
Website: **porodo.net**  
Service Support: **support@porodo.net**  
Instagram: **porodo**